

B16 Atom LED Beacon

Mount Permanent and Temporary

3 Bolt Mount

1. Drill holes on mounting surface for wire exit and mounting bolts.
2. Secure beacon onto mounting surface with mounting bolts.

Magnetic Mount

Flexible DIN Mount

WARNING: It is not recommended to use magnetically mounted warning devices on the outside of vehicles in motion. Usage is at the sole risk and responsibility of the user. (For moving vehicles, please use Power Mags).

Operation Instructions

RED: To +VDC

BLACK: To Chassis Ground (-)

WHITE: For Simultaneous or Alternating Flash

- Group1 Units: (Wiring- WHITE connected to RED) will flash together
- Group2 Units: (Wiring- WHITE not connected to RED) will flash together
- *Group1 Units will alternate with Group2 Units*

YELLOW: Flash patterns & Synchronization

- Connect YELLOW wires of all heads together for synchronization
- *All heads must be set at the same pattern
- Momentarily apply +VDC to YELLOW wire:
 - once for next pattern
 - quickly 3 times for reset

FP#	FLASH PATTERNS	FP#	FLASH PATTERNS
1	Double R65 (2Hz)	7	Quint
2	Single (2Hz)	8	Mega
3	Quad (2Hz)	9	Ultra
4	Single	10	Single-Quad
5	Double	11	Single H/L
6	Quad		

Note: This unit is may not be factory set at FP#1

1. Open beacon

Twist dome counter clockwise **B**, then lift dome to open.

2. Change pattern

Momentarily push red button to change to next flash pattern. (see flash patterns chart)



3. Close beacon

Twist dome clockwise **C** to close, and ensure that it is tight.

