



**MANUAL**  
**M100 DIGITAL**  
Measuring Wheel

# Introduction

**DM12** is a new revolution digital measuring wheel. It is designed based on Robust, Easy Use, Reliable and Ergonomics consideration. **DM12** will let you feel easy and comfortable to measure the distance than ever before.

- Large LCD with backlight display on handle bar for easy reading
- Pistol like handle bar for comfortable handling
- 6 key to control all functions
- 5 memories to keep data
- Patented folded design for easy use and storage
- Power saving for long life time usage

# Table of Contents

## ***Feature***

---

DM12 Parts ... ..	1
Key Layout and Definitions ... ..	2
Display ... ..	3

## ***Getting Started***

---

Power On/Off ... ..	4
Unit Change ... ..	4
Set To Zero ... ..	4
Hold Current Read Out ... ..	5
Backlight ... ..	5
Memory ... ..	5

## ***Power***


---

Power Saving Mode ... ..	7
Low Power ... ..	7
Changing Battery ... ..	8

# ***DM12 Parts***

---

Control Key

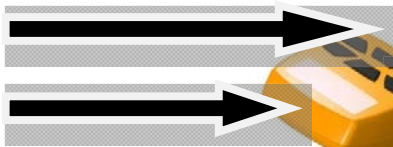

LCD Display



Handle Bar



Aluminum Bar



Patented Folded Wrist



Wheel Housing



Wheel




Kickstand



# Key Layout and Definitions

---

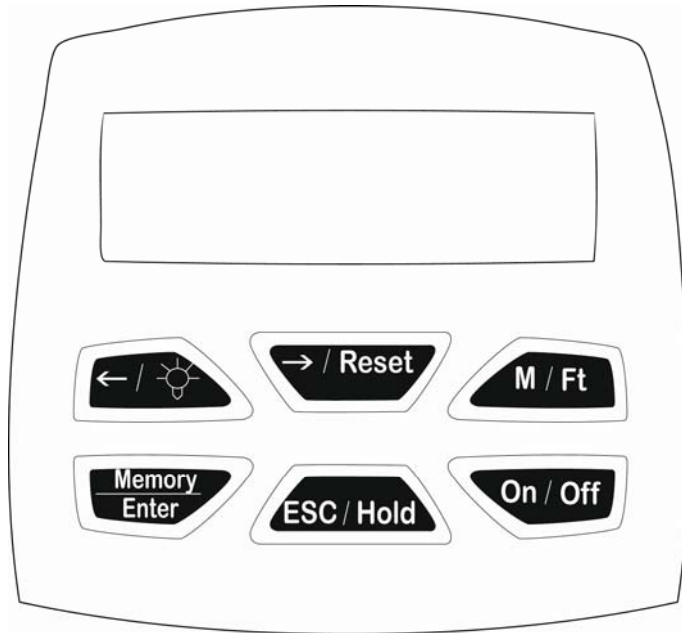

Power on and off key



Unit Change Key



Reset and Memory select



Backlight and Memory select




Memory mode and write read out into memory



Hold and release read out

# Display

---

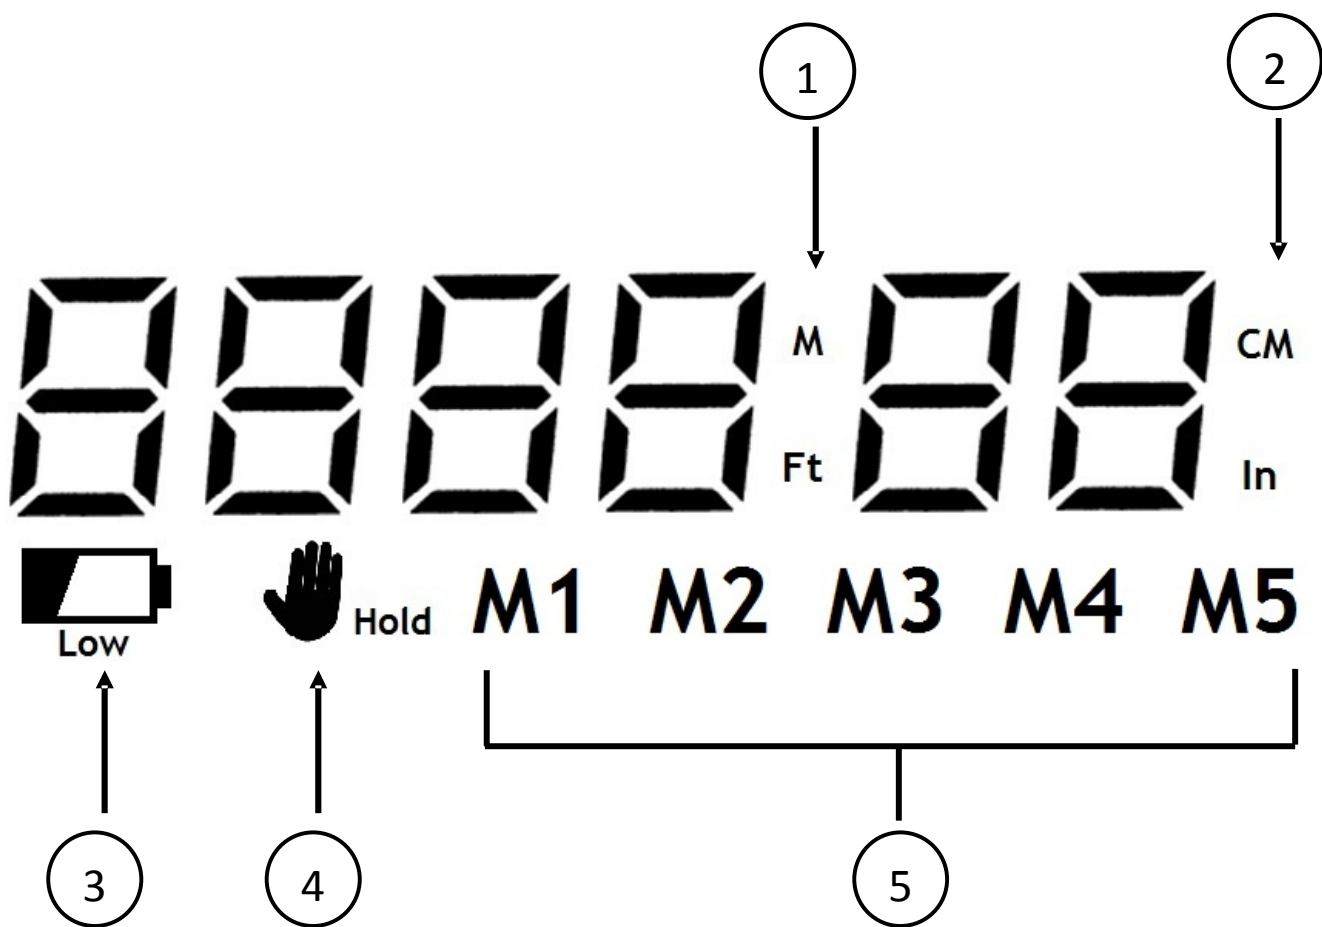

(1) Metric / Imperial unit Symbol (Meter/ Feet)

(2) Metric / Imperial unit Symbol ( Centimeter / Inches)

(3) Low power symbol

(4) Hold symbol

(5) Memory symbol

## ***Power On/Off***

---



Turn the DM12 on by pressing On/Off key on 2 seconds. Press Key again to turn off.

## ***Unit Change***

---



Press M/Ft Key to switch unit on Metric or Imperial.

## ***Set To Zero***

---



Press [->/Reset] Key for 2 seconds to set number to zero.

## **Hold Current Read Out**


---



Press ESC/Hold Key to hold current read out or release.

## **Backlight**

---

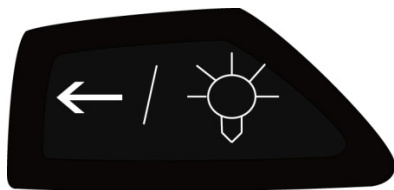

Press Light Sign to turn on the backlight by 2 seconds. The light will turn on 3 seconds then turn off automatically.

## **Memory**

---



There are Five memory space (M1~M5) to storage measurement number.  
These memories will always keep even remove the battery.

 


Step 1:

Key:

Display:

Hold the number



Into Memory mode

[M1 is twinkling]



Select Memory space

[ Memory space will twinkling when selected]

[ left and right select]



Press Enter to memorize

[Over write previous memory]



Press ESC to leave memory mode



## **Power Saving Mode**

---

DM12 will be turned off automatically if there is No ANY ACTIONS in 5 minutes.

## **Low Power**


---

DM12 will light up low power sign when it almost runs out of battery.



## **Changing Battery**

---

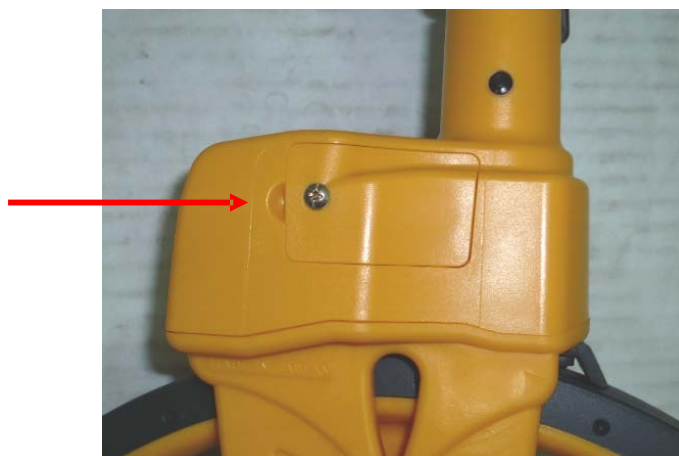

Open battery case by a screw driver.



Replace 9 volt battery. Model name is "6F22"

**Nivel System – service, support**  
**TPI Sp. z o.o., Bartycka 22, 00-760 Warsaw, Poland**  
**+48 22 651 03 06, +48 22 651 03 09, [tpi@tpi.com.pl](mailto:tpi@tpi.com.pl)**  
**[www.nivelsystem.com](http://www.nivelsystem.com)**